




1 - What's Included

This guide will show you what is included in your RTF kit.

Written By: Daniel Neal

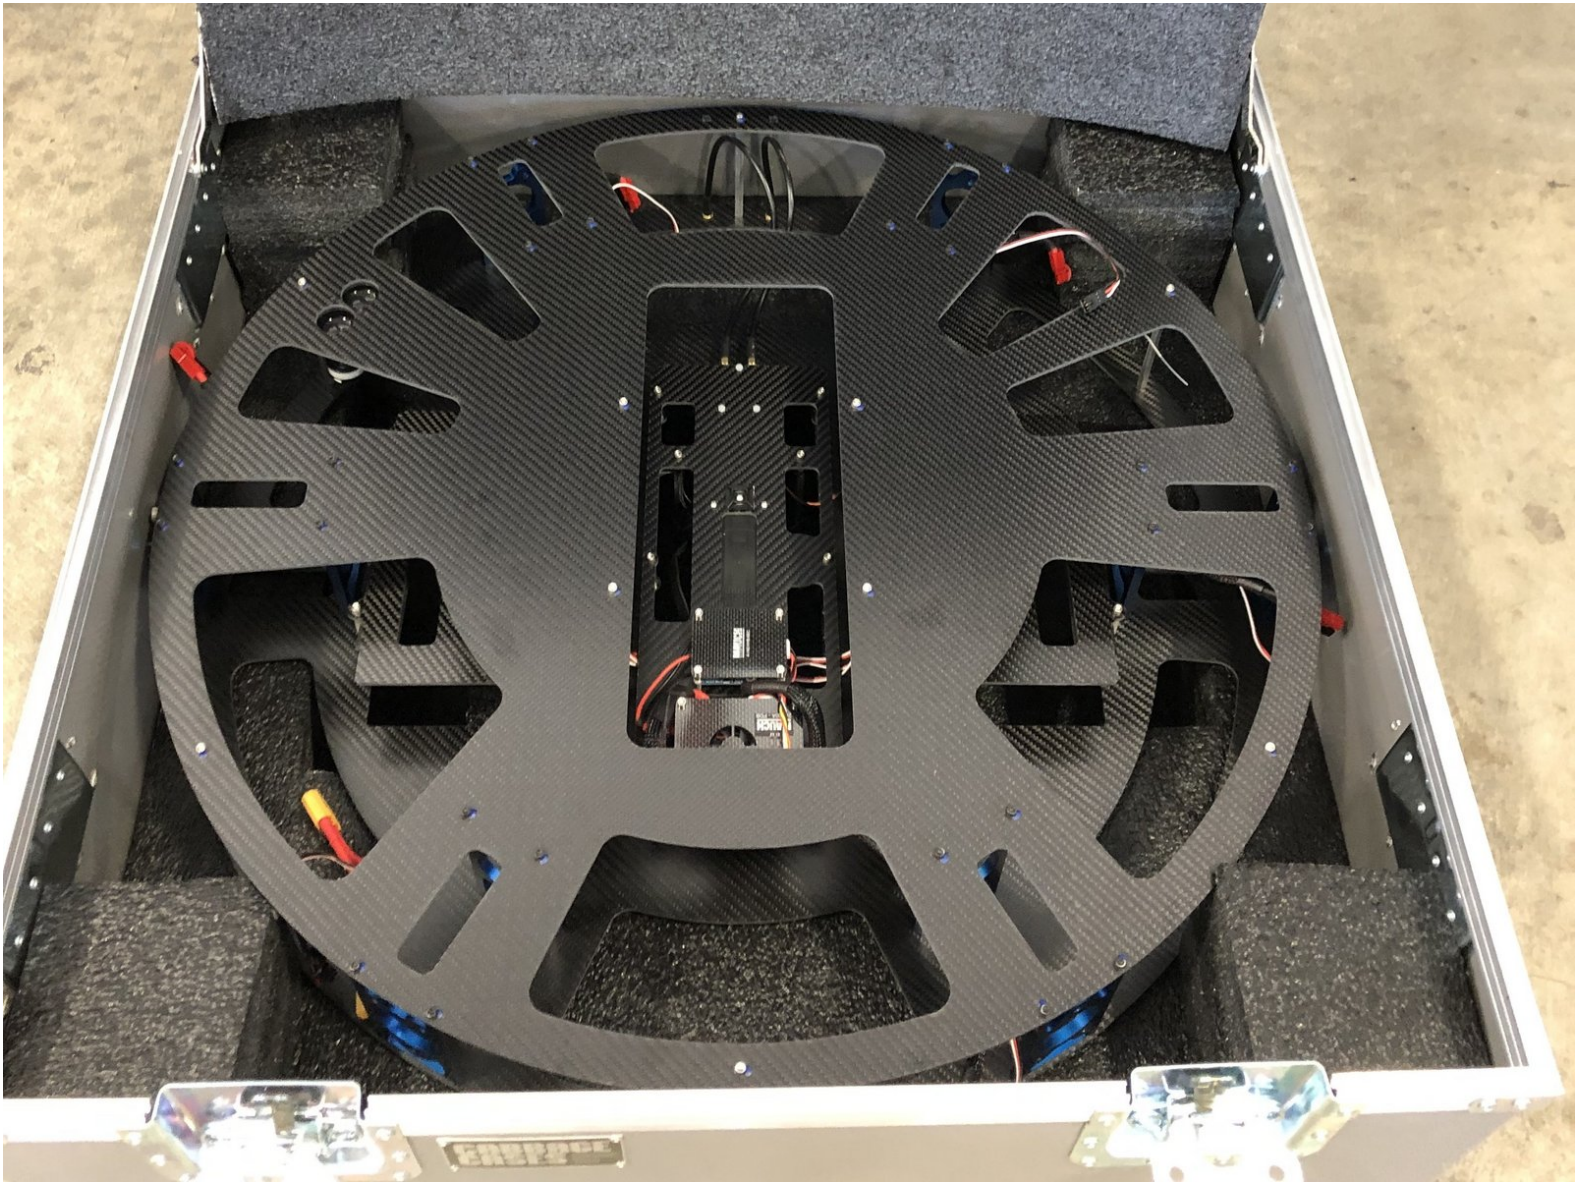

Step 1 — Your RTF Kit



- Your RTF (Ready-to-Fly) HLM Kit comes in two cases.
- The first case houses your drone, landing gear, arms, safety transmitter, and tool kit.

Step 2 — Tool Kit



- Included in the drone case is your field tool kit.
- This includes: ground side telemetry modem (with carbon fiber case usb cable, and antennas), spare arm mounting screws, spare arm terminal assemblies, one 3/16 ball driver, one 7/64 ball driver, one 9/64 Hex L-key, one 11/32 nut driver, one micro-usb cable
- Also included with the tool kit will be an un-terminated charging lead with proper connections for the ASW flight batteries, one charger for the safety transmitter, and one neck strap for the safety transmitter

Step 3 — Battery Case



- The second case is for your aircraft batteries.

Step 4 — Closing the Case



- Check the base of each arm to ensure that the motor wires get tucked into the carbon fiber arm tube. This will ensure that the motor wires do not get closed in the lid of the travel case.

⚠ If the motor wires get closed in the case, they may become broken and cause flight issues!

- When boxing the HLM back up, please ensure to check that all motor wires are inside the case before closing.