

1 - What is Included

This short guide will show what is included in your ILM Case

Written By: Daniel Neal



Step 1 — RTF Case








- Your ready-to-fly (RTF) ILM comes packed in one case
- All items, drone, tool kit, battery, and hand transmitter are included

Step 2 — Tool Kit



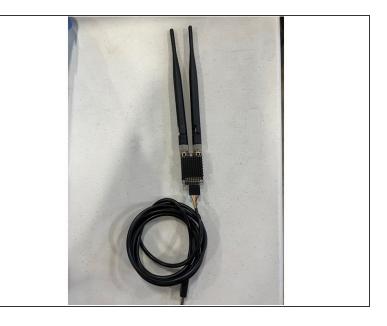

- Your tool kit is included in your RTF case
- Your kit will have one each of 3/16 and 3/32 drivers for ILM assembly, two spare terminal clips, two spare arm mounting screws, two spare landing gear mounting screws, and one micro-USB cable
- Your ground side telemetry modem is included and will be fully assembled with USB cable and two Dipoles